


CPT-06-LS
Loc-Sleeve Coupler
Joins two pieces of drip tape together, to repair cut or line breaks.



CPTBV-06-LS
Loc-Sleeve Coupler w/Valve
Joins two pieces of drip tape together with in-line valve.




ELL-06-LS
Loc-Sleeve ELL
Joins tape to tape to make bends and prevent kinking of drip tape.




FHS-06-LS
Loc-Sleeve X Female Hose Swivel
Joins tape to male hose thread fitting (water hose or faucet).




END-06-LS
Loc-Sleeve X End Cap
Closes tape at line ends. Allows easy and quick manual flushing.

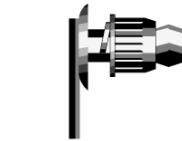


FHC-06-LS
Loc-Sleeve X Layflat
Hook-up from Layflat to drip tape. Requires layflat cutter and insertion tool.

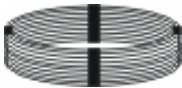


Supply Tube
1/4"(250) & 3/8"(400)
Used to make connection from header to tape to provide flexibility so not to kink tape.

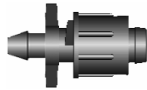

250B-06-LS
400B-06-LS
Barb X Loc-Sleeve
Makes connection from tape to header or supply tube.

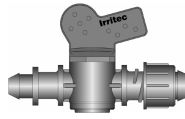

250BVL-06-LS
400BVL-06-LS
Barb X Loc-Sleeve w/Valve
Hooks tape to header or supply tube with in-line valve.

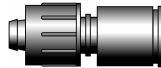

CA-06-LS
Loc-Sleeve X CA
Hooks tape to hose with compression adapter.




FCH-06-LS
Loc-Sleeve X Auto Drain End
Auto flush closure for drip tape ends.



MA-06-LS
Loc-Sleeve X 1/2" or 3/4" MPT
Adapter from pipe thread to drip tape.




MHT-06-LS
Loc-Sleeve X Male Hose Thread
Adapts from hose thread to drip tape.

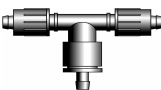


TEE-06-LSB
Loc-Sleeve X Barb Tee
250 & 400 series barb
Hook-up for center row feeding poly to drip tape.



Insertion Tool AP-H
Use with FHC-06-LS (shown below)
Installs FHC-06-LS fitting in layflat lines.

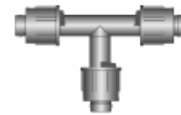


TEE-06-LS
Loc-Sleeve TEE
In-line tee for drip tape.

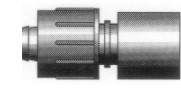


SSP-06-LS
Loc-Sleeve X 1/2" Socket 3/4" Spigot
Adapts from PVC pipe to drip tape.



MPT-06-LSTV
Loc-Sleeve X 1/2" MPT w/ Valve
In-line valve adapts from pipe thread to drip tape.

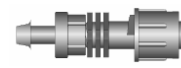


Head Connectors
400 series or 700 series
Used with the grommets to connect from PVC to drip tape.



Pipe Grommets
400-Gro, 700-Gro, 1000-Gro
Used in PVC header lines to adapt to barb fittings for lateral lines.



Barb Coupling
BC-250
BC-400
Joins Supply tubing to poly header lines.

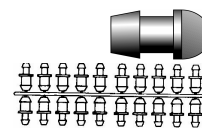





MP-400
Goof Plug
MP-2 (250 Dual Side)
Plugs for holes in poly lines. Not made to plug layflat lines.




Hole Punch
250 series
400 series
Makes hole for installing barb fittings in poly hose.




Layflat Cutter
For FHC-06-LS (shown to left)
Makes hole in layflat for FHC-06-LS fittings.

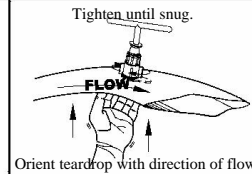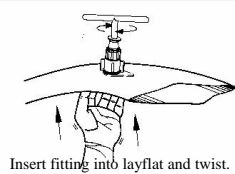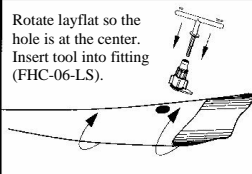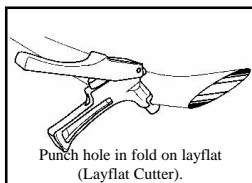

Typical Tape Hook-Up (Oval Hose or Flattube)

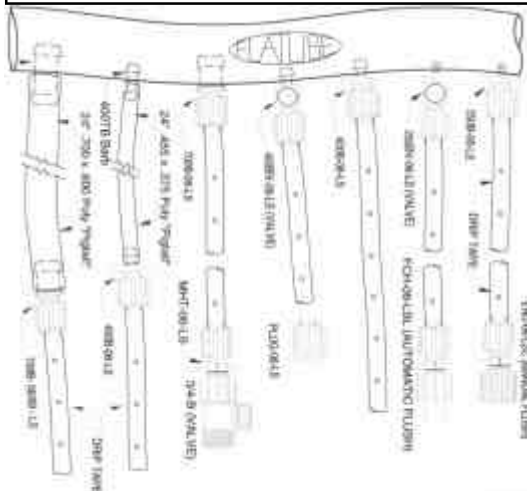

TAPE TO LAYFLAT HOOK UP

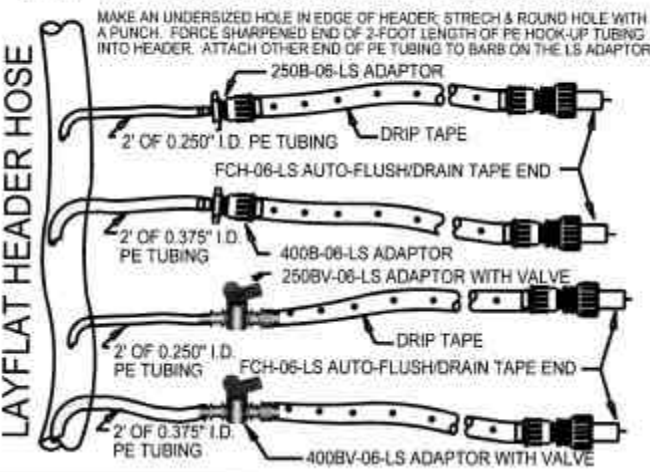

Grommet Installation

